



ELECTRONIC FUEL INJECTION

HOLLEY EFI ECU TERMINAL CRIMPER 567-100



OVERVIEW:

These crimpers are intended to be used with TYCO pins as used in kit 558-408 or as individual part numbers below:
16-18ga pin TYCO # 3-1447221-3
20-22ga pin TYCO # 3-1447221-5



INITIAL SETUP:

1. These crimpers ship with a support assembly that is not used with TYCO pins. To remove it start by loosening the nut (**Figure 1**) using a 9/32 wrench or socket.
2. Re-install and snugly tighten the nut (**Figure 2**). Take care not to overtighten the nut as damage to the tool can occur.
3. Terminals will sometimes need to have the crimped portion (see above) squeezed inward slightly with pliers prior to fitting in the tool.

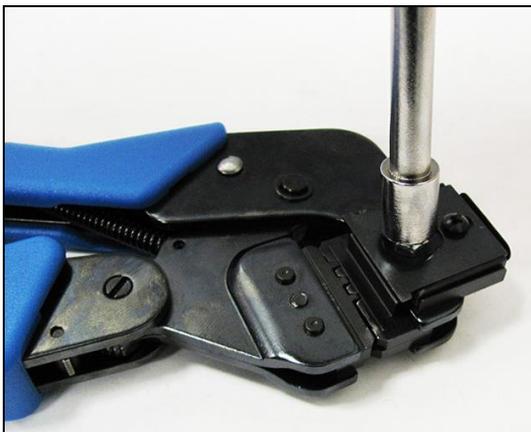



Figure 1







Figure 2

DO'S AND DON'T'S

CORRECT

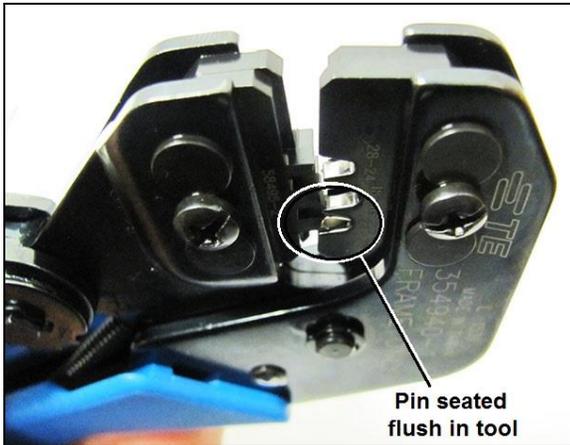

INCORRECT

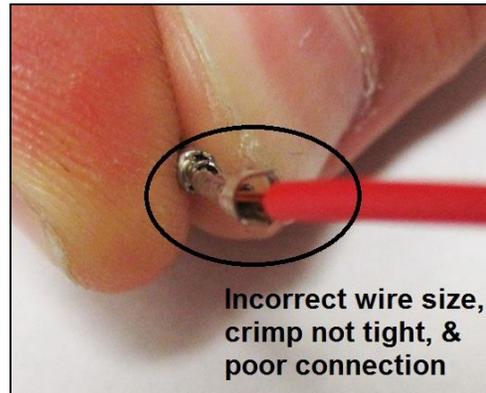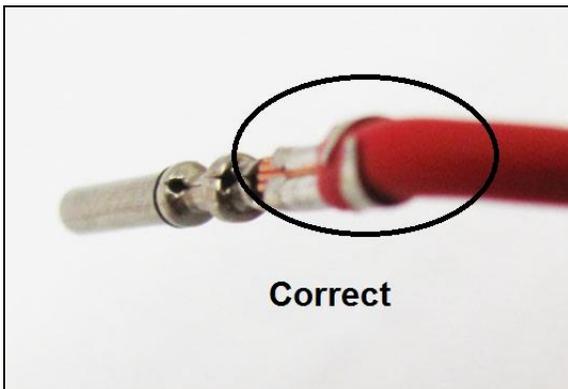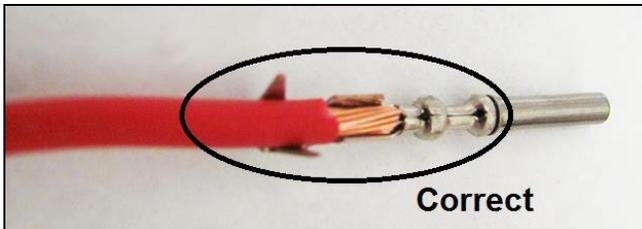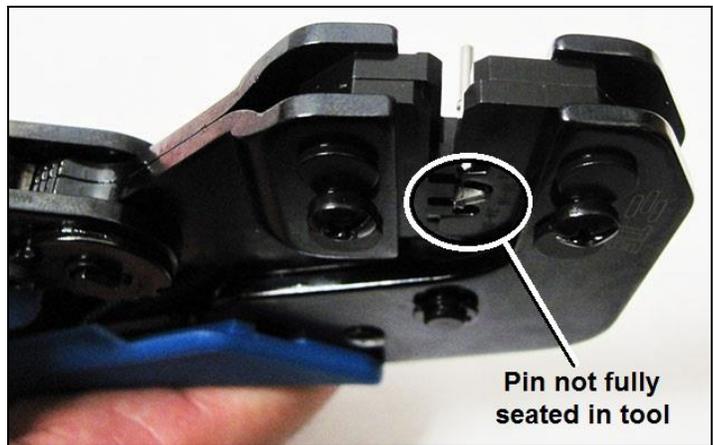

Holley Technical Support: 1-866-464-6553

2016 © Holley Performance Products, Inc.

199R11022
Date: 6-9-16